

PRESS MOUNTING EQUIPMENT

TOOLING MOUNTING SYSTEMS FOR PRESSES AND PRESS BRAKES

MOUNTING ACCESSORIES

UniPunch offers a variety of mounting accessories, gauges (stops), part supports (feed rails), wrenches and hold down bolts to provide fast and easy assembly of modular tooling. The mounting accessories you will require depends on the nounting method you slect and the ype of part being punched.



**UNIVERSAL
STOPS**

For use with template or T-Slotted Plate mounting setups with either 'A' or 'B' Series Units.



**MAGNETIC
STOPS**

For template, T-slotted plate and Bed Rail mounting setups, these Magnetic Stops ensure accurate gauging of all work pieces.



 
**CLOSE EDGE
STOPS**

Close Edge Stops allow units to be set closer together and still have room for gauges.

PRESS MOUNTING EQUIPMENT

TOOLING MOUNTING SYSTEMS FOR PRESSES AND PRESS BRAKES

MOUNTING ACCESSORIES

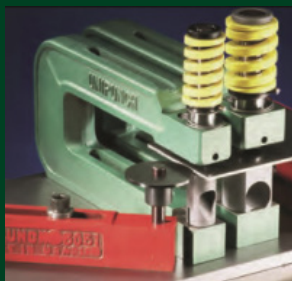

CLOSE EDGE STOPS (DISC)

Disc Gauge allows work piece to be gauged inside a holder close to die.



DOWEL PIN STOPS

This economical stop is designed for use with 'A' or 'B' Series units on template mounting.



ADJUSTABLE STOPS

Adjustable Stop has an adjustable screw for quick compensation of various work piece sizes.



 
ADJUSTABLE END STOPS & SPACER ASSEMBLY

These End Stops are adjustable front-to-back in three positions on Unispacer.



DISAPPEARING PIN STOPS

Disappearing Pin Stops are spring loaded and are used for edge and end gauging in progressive operations.

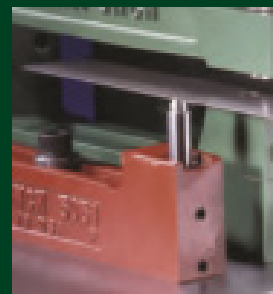

PICKUP GAUGES - FIXED

UniPunch stationary Pickup gauges are used to engage previously punched holes.

PRESS MOUNTING EQUIPMENT

TOOLING MOUNTING SYSTEMS FOR PRESSES AND PRESS BRAKES

MOUNTING ACCESSORIES



 
PICKUP GAUGES - SPRG. LD.

This UniPunch gauge is used in operations requiring retractable pickup pins, such as multiple hit setups.



FEED RAILS

The Magnetic Feed Rails are simply placed on mounting plates eliminating hold down bolts.

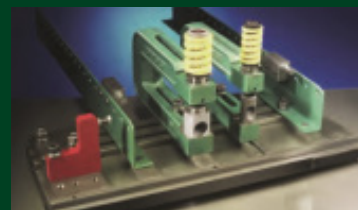

ADJUSTABLE BACK STOPS

For use on 5000 and 5100 series bed rails to back gauge and support part.



ADJUSTABLE BACK GAUGES

The Adjustable Back Gauge is used to accurately position parts.




LOCATOR PINS

For locating units in position with actual part on T-Slotted Plate or Bed Rail.


PRESS MOUNTING EQUIPMENT

TOOLING MOUNTING SYSTEMS FOR PRESSES AND PRESS BRAKES

MOUNTING ACCESSORIES

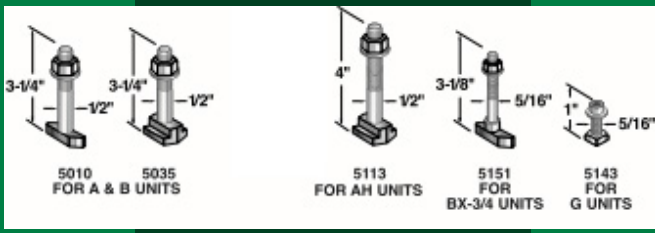

NUT, BOLT & WASHER SETS

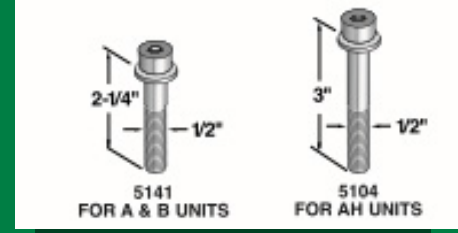


TEMPLATE MOUNTING SCREWS & WASHER



HEX T WRENCH

 Designed for efficiency, the special loop handle on the wrench makes the hex key easier to use.

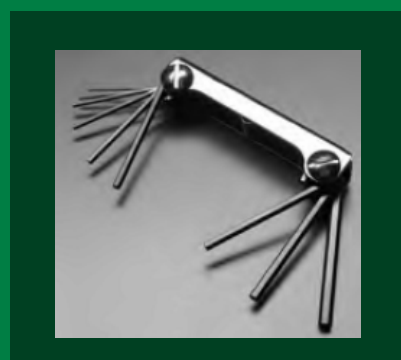

UNIKEY WRENCHES

This Hex wrench includes most of the standard hex sizes required for UniPunch unit screws and bolts.

CONTACT UNIPUNCH TO LEARN MORE ABOUT PUNCHING PARTS FAST

1-800-828-7061

WWW.UNIPUNCH.COM

INFO@UNIPUNCH.COM