


# EMBOSS


**EMBOSSING IS A RAISED OR SUNKEN INDENTATION IN SHEET METAL WITHOUT CUTTING THE MATERIAL**

## EMBOSSING

This is commonly used to form one part to fit around another. "A" series units with adjustable feed opening are recommended for easy removal of formed part. When placing an order or requesting a quote, please send a drawing indicating the angle, overall height and material type and thickness as shown below.

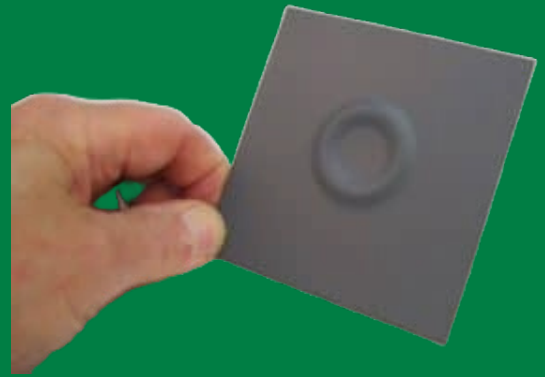

**Emboss**  
Form down

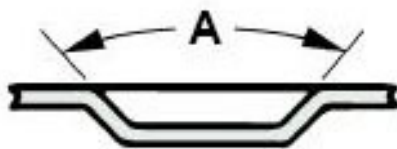

**Required Parameters**

Diameter  
A = Angle  
Overall Height  
Material Thickness

**CONTACT UNIPUNCH TO LEARN MORE ABOUT PUNCHING PARTS FAST**